

NOZZLE REPLACEMENT INSTRUCTIONS

FOR PURELL® HIGH-CAPACITY WALL DISPENSER ONLY

Replace the nozzle as needed.

If retrofitting an existing dispenser, remove black funnel by pressing down.

INSTRUCTIONS:

1. Tilt the nozzle into opening.



2. Hold one side of nozzle and use force to push other side until it snaps into place.



3. Unlock and open dispenser.



4. Slide nozzle with key toward back of dispenser.



5. Hold nozzle in place. Use Wipe Threading Tool to push wipe through opening in flexible rubber piece.



6. Close and lock dispenser.

