

# PURELL® BRAND CXI™ TOUCH FREE COUNTER MOUNT DISPENSER INSTALLATION INSTRUCTIONS

These instructions apply to the PURELL CXI dispenser.

**Please carefully read all instructions before installing and using the dispenser.**

## TOUCH FREE COUNTER MOUNT SYSTEM INSTALLATION GUIDE

### If there is a dispenser currently installed

- Remove the existing unit, both the above and below counter assemblies
- Clean the counter area where the previous dispenser was located
- Verify the size of the existing counter hole is 15/16" to 1-1/4" in diameter


### If there is no hole in the counter

- **Prior to drilling**, examine below counter to ensure adequate clearance for the new unit
- Drill a 1" diameter hole in the counter top
- The hole can be drilled to either the right or left of the faucet, ensuring adequate clearance for the below counter assembly
- Clean the counter area where the new hole is located


## Installing the CXI Touch Free Counter Mount System

Prior to beginning installation, study the exploded view of the touch free counter-mounted system and locate all the pieces.


If using a battery box to power the system, look beneath the countertop to find a suitable place for mounting of the battery box (9) so that it will not interfere with system components or plumbing.

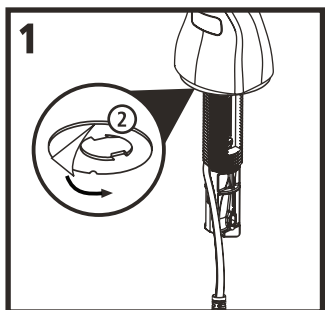


Remove the paper liner from the bottom of the adhesive gasket (2) to expose the adhesive.

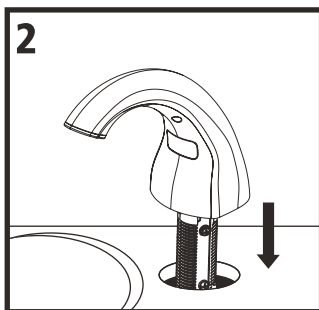

Feed the data cable (6) and the stem of the dispenser assembly (1) through the hole in the countertop. Point the spout of the dispenser into the sink bowl and press down firmly on the dispenser to securely attach it to the counter top.

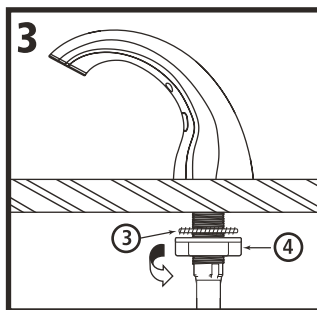


From underneath the counter, first feed the lock washer (3) and then the mounting nut (4) over the data cable (6) and onto the threaded stem of the dispenser assembly (1). Be sure that the "teeth" on the washer will touch the bottom of the counter top and that the nut threads easily onto the stem. (If the nut is hard to turn by hand, it is upside down.) Hand-tighten the nut securely.

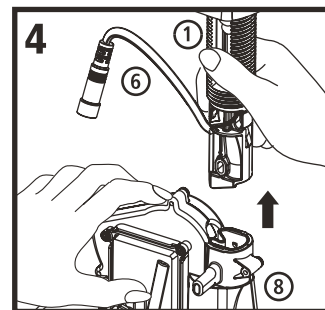


Align the indent inside the top of the motor assembly/bottle support (8) with the indent on the stem of the dispenser assembly (1) and firmly push the motor assembly/bottle support up, onto the stem.

**NOTE:** Hold the data cable (6) out of the way as you push up on the motor assembly/bottle support. Continue pushing upward until the vertical slots in the dispenser stem and the motor assembly/bottle support line up.

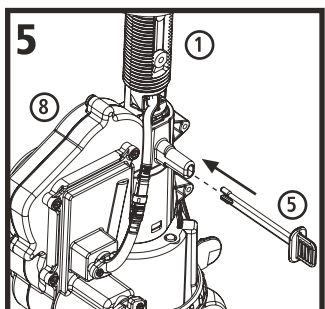


Secure the motor assembly/bottle support (8) to the dispenser assembly (1) stem by pushing the retaining clip (5) into place through the vertical slots, until it goes all the way through the motor assembly.


**NOTE:** The clip may be inserted from either side.

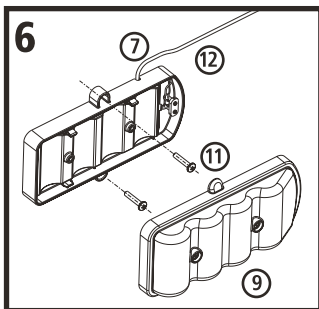

If using a battery box (9), remove the cover by loosening the two captive screws. Position the box on a convenient (vertical or horizontal) surface under the counter top that will allow access for battery changing. Attach the box to the surface using the two screws (11) and anchors (if attaching to a plaster or masonry surface). Use the wall clip (not included) to secure the power cable (7) to a wall or other under-counter surface if desired.

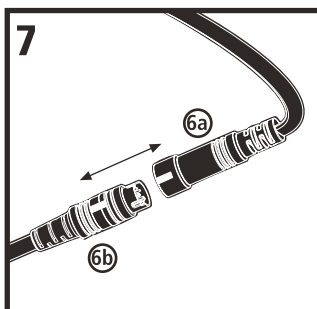

Connect the two halves of the data cable (6a and 6b) by lining up the white stripes on each half and pushing the cable connectors together until the stripes touch.

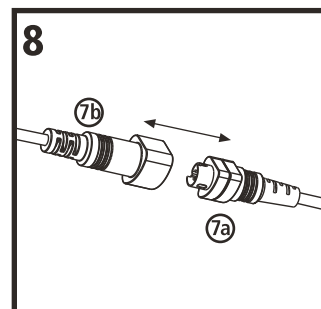


Connect the Power Connector to battery box or AC adaptor.

**NOTE:** After the batteries are installed in the battery box and the two halves of the data cable are connected, it will take approximately 20 seconds before the touch free Counter Mount system is ready to dispense soap.


## Refill Installation

(refill ⑩ sold separately)

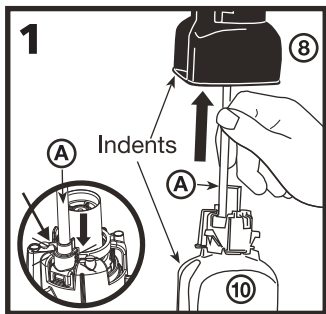


Snap in dispenser straw (A) (see inset). Feed the dispenser straw (A) on the refill bottle ⑩ up through the motor assembly/bottle support ⑧ and dispenser assembly ①, aligning the two indents in the bottle and the support. Slide the bottle upward until it snaps into place.


**NOTE:** The refill is not properly installed until you hear the "snap" (as the green release latch on the motor assembly/bottle support 8 engages).

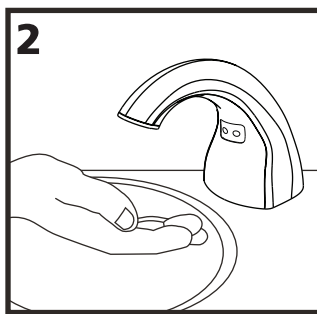


Test the system by passing your hand under the spout of the dispenser assembly ① (in front of the sensor window) three or four times, until foam soap appears. If the system does not dispense soap after passing your hand in front of the sensor several times and no sound heard from motor assembly after placing hands in front of sensor, check to see that the data cable ⑥ and energy source halves are firmly connected, that the batteries are "good", and that the battery box ⑨ cover is properly positioned and fastened to the box. If not dispensing or dispenser is multi-activating, check for bent contact pins inside connector ⑥b.

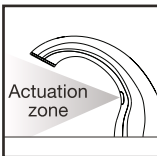

## Refill Removal

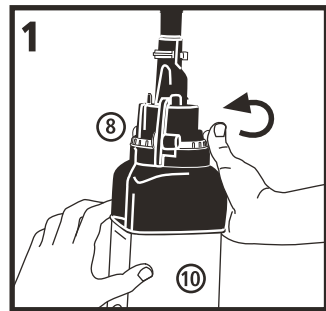

Grasp the empty refill bottle ⑩ with one hand and use the other hand to push the green release latch on the motor assembly/bottle support ⑧ to the right (counterclockwise as seen from above).

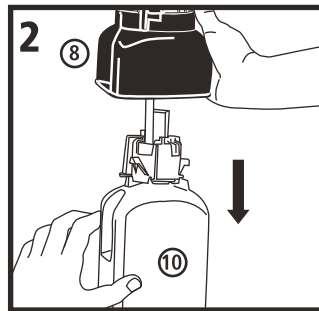


While still pushing the green release latch, pull downward on the refill bottle ⑩ and remove it from the motor assembly/bottle support ⑧.

## Cleaning the Counter Mount System

Use only mild soap and water to clean the touch free counter mount system spout. Cover the sensor window while cleaning the spout so that you do not continue to dispense soap.

**DO NOT** use abrasives to clean the dispensing spout (since this may damage the finish or the sensor window).

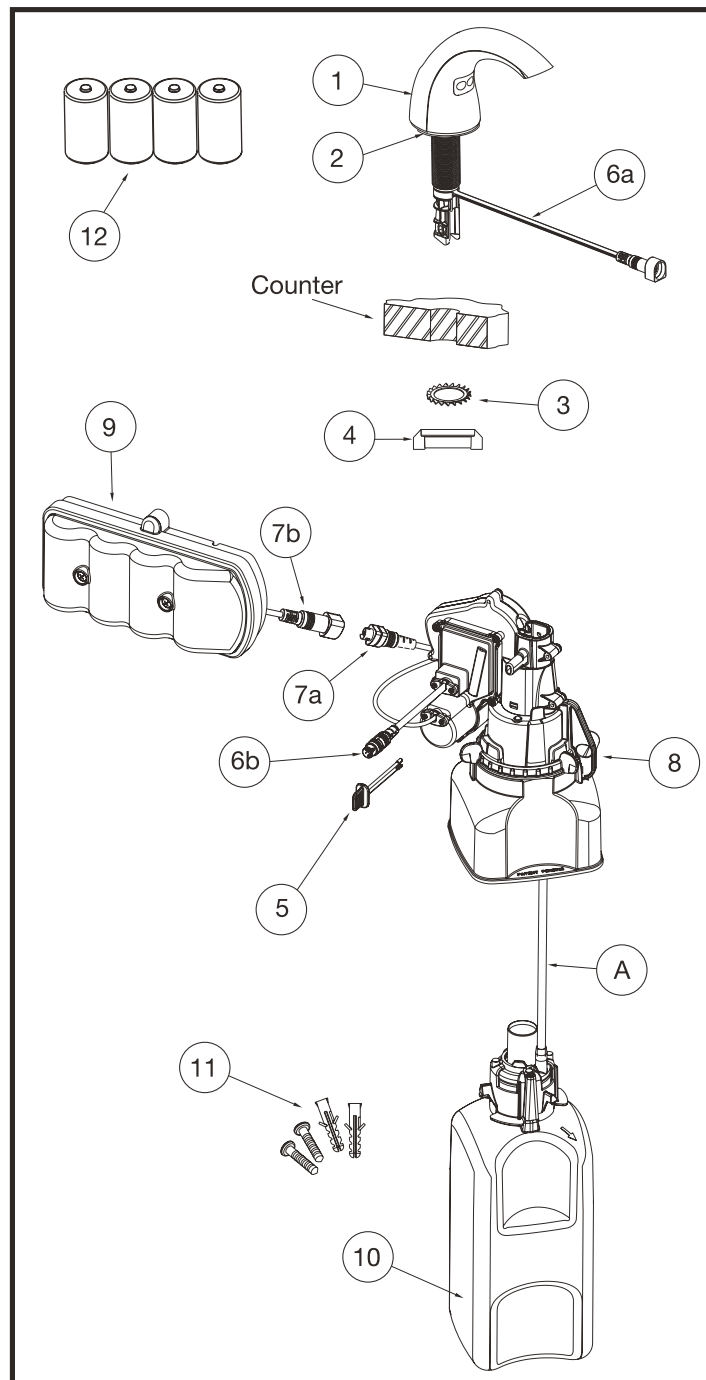

ITEM	DESCRIPTION	QTY.
1	DISPENSER ASSEMBLY	1
2	ADHESIVE GASKET	1
3	LOCK WASHER	1
4	MOUNTING NUT	1
5	RETAINING CLIP	1
6	DATA CABLE (2 HALVES WITH CONNECTOR - a and b)	1
7	POWER CABLE (2 HALVES WITH CONNECTOR - a and b)	1
8	MOTOR ASSEMBLY/BOTTLE SUPPORT	1
9	BATTERY BOX (4 "D" CELL BATTERIES PROVIDED)	1
10	REFILL BOTTLE (SOLD SEPARATELY)	2 EA.
11	SCREWS & ANCHORS FOR BATTERY BOX MOUNTING	1
12	"D" CELL BATTERIES (PROVIDED)	1



GOJO Industries, Inc.  
One GOJO Plaza, Suite 500  
P.O. Box 991 • Akron, OH 44309-0991  
Tel: 1-330-255-6000 • Toll-free: 1-800-321-9647  
Fax: 1-800-FAX-GOJO